




SERVICE BULLETIN #6 NOV 2018

TAG, Flipper buttons stick in sometimes
Application: All machines.

(1) Remove LED button illumination PCB (2 x screws) on the affected side.

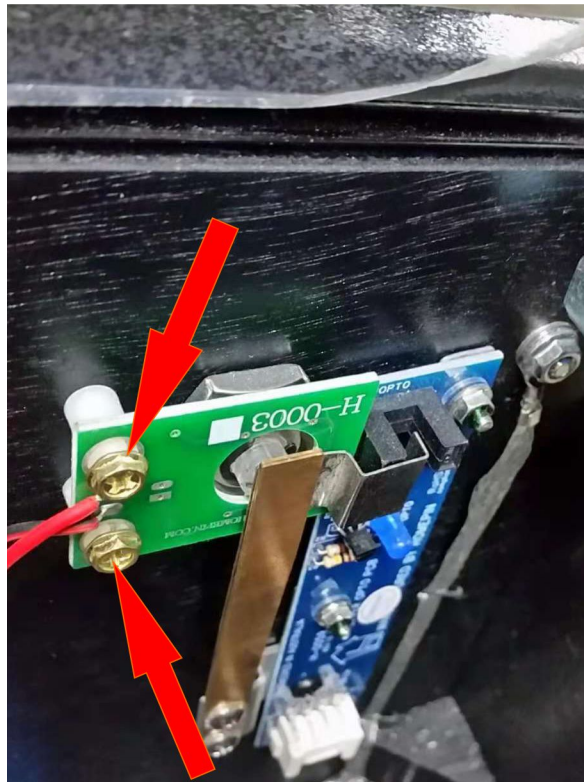

(2) Remove the “C” clip that holds the button in the housing – CAUTION – it is spring loaded and will fly out possibly resulting in the loss of the spring. Note the direction of the spring for refitting.

(3) Using #400 wet & dry sandpaper, clean the end of the shaft from any rough spots. Usually only the end 50% will need attention.



(4) Refit the button and “C” clip and check for smooth operation. Refit the LED PCB.

[www.https://www.homepin.com/kits/flipper_buttons_stick.pdf](https://www.homepin.com/kits/flipper_buttons_stick.pdf)

© Homepin Ltd (HK)

--oo00oo--