



**TAG.** Gives replays at first switch closure OR seems to do random things such as incorrect DMD display or audio clips.

**Application:** All machines.

**Cause:** Usually this is a result of the memory becoming corrupted after a re-program OR making numerous adjustments to many different menu settings OR some other outside influence.

**Remedy:** In the service menu we have provided a “factory OEM reset”. This returns most settings as they were at the factory. Also ensure that the setting for auto percent is set at “1 percent”

**GAME SETTINGS > AUTO REPLAY = “1 PERCENT”**

After ANY re-program or if the machine seems to be doing random things, the very next step is to navigate to the Factory OEM reset and do a reset. This literally only takes seconds.



[https://www.homepin.com/kits/random\\_events.pdf](https://www.homepin.com/kits/random_events.pdf)

© Homepin Ltd (HK)

--000000--